

**TEMPERATURE**

The DX2-111 can be placed at the front or rear of the rack to monitor cool air entering and/or hot air being expelled to ensure proper containment.

Anixter Code 9788459

**RACK INLET TEMPERATURE AND HUMIDITY**

The DX2-13111 strings together 3 sensor heads, making it easy to mount them at the bottom, middle, and top of the cool air inlet side as per ASHRAE L5 guidelines.

Anixter Code 9790499

Anixter Code 1029864

Anixter Code 9787675

**VIBRATION**

The DX-VBR detects vibrations such as earthquakes and damaged fans along three axes (x, y, z).

Anixter Code 897990

**AIR FLOW**

The DPX-AF1 can meter airflow in plenum space, such as under a raised floor or just above the perforated tiles.

Anixter Code 451271

**WATER/LEAK**

The DX-W51-K11, DX-W51-S5-K11, and DPX-W5C-70-KIT sensors monitor leaks on the floor, around an area, on liquid cooled racks, and can detect condensation.

Anixter Code 529976

**CONTACT CLOSURE**

DX2-CD2 duct contact closure is used with third party sensors, and integrates with data center smoke detectors to monitor risky conditions and aggregate data through Varian Kerus Platform.

Anixter Code 9790500

**DIFFERENTIAL AIR PRESSURE**

The DPX-TDPI meters differential air pressure above and below a raised floor, or between hot aisles and cold aisles to prevent thermal leaks.

Anixter Code 451270

