




# Cleaning and Disinfection Guide for the Corona Virus

This is the recommended cleaning and disinfecting guide for LG display products\* related to the COVID-19. Be sure to observe the following procedures and precautions when cleaning and disinfecting products

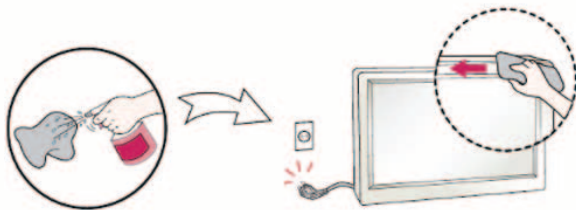

## Please observe the disinfection order as follows:

- Turn off the Product (Unplug all external power, devices, and cables).
- Prepare a lint-free soft cloth (Choose cloth for non-worn cleaning to avoid scratching the screen).
- Spray a small amount of disinfectant to **dampen** the cloth. (The recommended disinfectant **should not be** more than 70% ethyl alcohol, or **no** more than 70% isopropyl alcohol).
- Wipe the surface of the product gently. (Be careful not to scratch the display surface).
- Wipe the surface with a dry cloth so as to prevent moisture on the product.

## Please observe the following precautions when disinfecting:

- Do not use abrasive cloth, towels, hand towels, and/or rough materials.
- Do not use any other non-recommended cleaning agent.
- Do not spray the cleaning agent directly on the product and do not allow liquid into the device.
- Do not apply too much pressure to the display as this may cause damage the product.
- Wear gloves and be careful not to scratch the display with accessories such as rings.

\* This guidance does not apply to LG Medical Monitors. Please see the separate Medical Monitor Cleaning Guide for that topic.