

Product Guide

SONOS



CONNECT:AMP

THIS DOCUMENT CONTAINS INFORMATION THAT IS SUBJECT TO CHANGE WITHOUT NOTICE.

No part of this publication may be reproduced or transmitted in any form or by any means, electronic or mechanical, including but not limited to photocopying, recording, information retrieval systems, or computer network without the written permission of Sonos, Inc. Sonos and all other Sonos product names and slogans are trademarks or registered trademarks of Sonos, Inc. Sonos Reg. U.S. Pat. & Tm. Off.

Sonos products may be protected by one or more patents. Our patent-to-product information can be found here:

sonos.com/legal/patents

AirPlay®, Apple Music™, FairPlay®, iPad®, iPhone®, iPod®, iTunes®, and OS X®, are trademarks of Apple Inc., registered in the U.S. and other countries.

"Made for iPod", "Made for iPhone", and "Made for iPad" mean that an electronic accessory has been designed to connect specifically to iPod, iPhone, or iPad, respectively, and has been certified by the developer to meet Apple performance standards. Apple is not responsible for the operation of this device or its compliance with safety and regulatory standards. Please note that the use of this accessory with iPod, iPhone, or iPad may affect wireless performance.

Windows® is a registered trademark of Microsoft Corporation in the United States and other countries.

Android™ is a trademark of Google, Inc.

Amazon, Kindle, Kindle Fire, the Amazon Kindle logo and the Kindle Fire logo are trademarks of Amazon.com, Inc. or its affiliates.

Sonos uses MSNTP software, which was developed by N.M. Maclaren at the University of Cambridge.

© Copyright, N.M. Maclaren, 1996, 1997, 2000; © Copyright, University of Cambridge, 1996, 1997, 2000.

All other products and services mentioned may be trademarks or service marks of their respective owners.

October 2017

©2004-2017 by Sonos, Inc. All rights reserved.

Sonos CONNECT:AMP

The Sonos CONNECT:AMP™ includes a built-in state-of-the-art digital amplifier that can power large or small speakers, allowing you to enjoy superior audio quality in every room.

- Includes a multi-port Ethernet switch to enable direct connections to routers, computers, or other Sonos products.
- Includes analog audio inputs with digital encoding so that music from an external audio source (such as a CD player or portable MP3 player), can be connected to one CONNECT:AMP and played by all the other Sonos products in your system.
- Works seamlessly with the complete range of Sonos products.

New to Sonos?

It takes just a few steps to get Sonos up and running—simply follow the setup instructions packaged with your CONNECT:AMP. Once you've got it set up, you can add additional Sonos products any time.

Adding to an existing Sonos system?

Sonos can be easily expanded room by room. You can turn directly to **Adding to an existing Sonos system** if you are adding this CONNECT:AMP to an existing Sonos system.



Your home network

To use the Sonos app, your device must be on the same network as Sonos. If you need help, please go to <http://faq.sonos.com/notfound>.

Requirements

To access music services, Internet radio, and music stored on your computer or Network-Attached Storage (NAS) device, make sure your network meets these requirements.

Note: Make sure your network has a high-speed Internet connection because Sonos is designed to provide you with free, online software updates. Your Sonos system must be registered to receive these updates so **be sure to register** during the setup process. We do not share your e-mail address with other companies.

- High-speed DSL/cable modem, or fiber-to-the-home broadband connection for proper playback of music services. (If your Internet service provider only offers satellite Internet access, you may experience playback issues due to fluctuating download rates.)
- If your modem isn't a modem/router combination and you want to take advantage of Sonos' automatic online updates or use a streaming music service, you'll need to install a wireless router before setting up Sonos.

Note: Sonos communicates over a 2.4GHz home network supporting 802.11 b/g/n wireless technology. 802.11n only network configurations are not supported—you can either change the router settings to 802.11 b/g/n or connect a Sonos product to your router.

- Connect a Sonos BOOST or speaker to your router if:
 - You have a larger home where the Wi-Fi performance isn't reliable and you want to strengthen the wireless performance of your Sonos system.
 - Your Wi-Fi network is already in high demand with streaming video and web surfing and you want to create a separate wireless network exclusively for your Sonos speakers.
 - Your network is 5GHz only (not switchable to 2.4GHz).
 - You have configured your router to support only 802.11n and can't change the settings to support 802.11 b/g/n.
- For best results, you should connect the computer or NAS drive that contains your personal music library collection to your network router using an Ethernet cable.

The Sonos app


Download the free Sonos app to any compatible device:

- **Sonos app (iOS)**—iPhone, iPad and iPod touch running iOS 9.0 or later
- **Sonos app (Android)**—Android 4.3 and higher
- **Sonos app (PC)**—Windows® 7 and higher
- **Sonos app (Mac)**—Macintosh® OS X 10.10 or later

Get the app for your computer at www.sonos.com/support/downloads.

For the latest system requirements and compatible audio formats, go to <http://faq.sonos.com/specs>.

CONNECT:AMP front

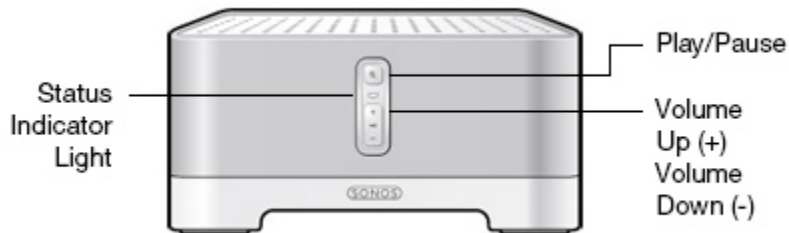

On / off

Sonos is designed to be always on; the system uses minimal electricity whenever it is not playing music. To stop streaming audio in one room, press the **Play/Pause** button on the CONNECT:AMP.

Status indicator

Indicates the current status. During normal operation the white light is dimly lit. If desired, you can turn off the white light from **Room Settings**.

See **Status indicators** for a complete list of status indications.

Play/Pause


Press to control audio (restarts the same music source unless a different source is selected).

- Press *once* to start or stop streaming audio
- Press *twice* to skip to the next track (if applicable to the selected music source)
- Press *three times* to skip to the previous track (if applicable to the selected music source)
- Press and hold to add the music playing in another room.

Volume up (+) Volume down (-)

Press to adjust the volume up and down.

CONNECT:AMP back

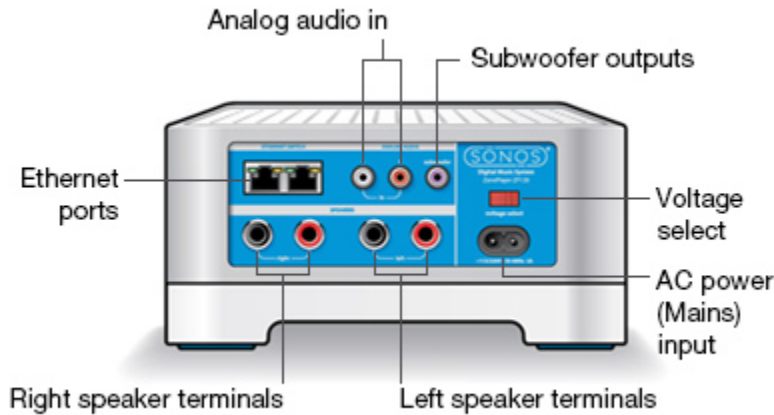

Ethernet ports (2)

You can use an Ethernet cable (supplied) to connect to a router, computer, or additional network device such as a network-attached storage (NAS) device.

LED indicators:

- Green (link connection)
- Flashing Yellow (network activity)

Right speaker terminals

Use high-quality speaker wire to connect the right speaker to the CONNECT:AMP.

Left speaker terminals

Use high-quality speaker wire to connect the left speaker to the CONNECT:AMP.

Voltage select

100 – 120V~ / 220 – 240V~ 50 – 60 Hz

Select the appropriate voltage setting for your country.

AC power (mains) input

Use only the supplied power cord to connect to a power outlet (using a third party power cord will void your warranty).

Analog audio in

You may use a standard RCA audio cable to connect the CONNECT:AMP's analog audio inputs to the audio outputs from a separate audio component, such as a CD player or a portable music player.

Subwoofer output

Note: If you disconnect your subwoofer, make sure to also disconnect the subwoofer's cable from the CONNECT:AMP output.

You may connect a powered subwoofer to this output using a standard RCA cable. The system will detect when a cable is connected to the subwoofer output and adjust the crossover frequency automatically.

Adding to an existing Sonos system

Once you've got your Sonos system set up, you can easily add more Sonos products any time (up to 32 rooms).

If your house has structured (built-in) wiring, you can make a wired connection to the additional Sonos products. If you don't, our built-in wireless technology is ideal for you.


1. Attach desired speakers.

- Your speaker's power rating should be at least 75W for 8 Ohm speakers, and at least 150W for 4 Ohm speakers. Do not connect speakers rated at less than 4 Ohms.
- Use your thumb or finger to firmly push the spring-loaded speaker connector post inward to reveal the connection hole.
- Insert the stripped end of the speaker wire into the hole, and then release. The stripped portion should be caught firmly in the connector post.

Note: Connect the **red** (+) and **black** (-) terminals from each speaker to the corresponding terminals on the Sonos CONNECT:AMP. Mismatching of polarities will result in weak central sound, and a distorted sense of sound direction.

When making connections, ensure that none of the strands of your speaker wire come in contact with an adjoining terminal on the rear panel.

- Repeat to install the other speaker wires.

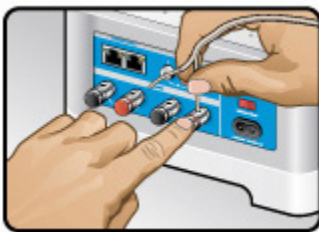

- If your speakers have banana connectors, you can insert the plugs directly into the banana jacks on the back of the CONNECT:AMP instead.
- ### 2. Attach the power cord and plug into a wall outlet—make sure the *Voltage Switch* on the back of the CONNECT:AMP is set to the proper position for your country before applying power.

After a few moments, the **Status indicator** will begin to flash green (if this Sonos product was previously connected to another Sonos system, the Status indicator may be solid white instead.)

3. Choose one of the following options:

- On a mobile device, go to **More** -> **Settings** -> **Add a Player or SUB** and follow the prompts.
- On a Mac or PC, go to **Manage** -> **Add a Player or SUB** and follow the prompts.

Thick walls, 2.4 GHz cordless telephones, or the presence of other wireless devices can interfere with or block the wireless network signals from Sonos. If you experience difficulty after positioning a Sonos product, try one or more of the following resolutions—relocate the Sonos product; change the wireless channel your music system is operating on; connect a Sonos product to your router if your setup is currently wireless.

Using line-in

You can connect an external source like a portable music player to any Sonos player that has a line-in connection. The source will be automatically detected as soon as you plug it in.

To a portable music player: Use a 1/8 inch mini-stereo to RCA audio cable—plug the mini-stereo end into the portable device and the RCA end into the **Audio In** connection on the Sonos player.

To an external source like a CD player: Plug a standard RCA cable into the analog **Audio In** connections on the back of your Sonos player.

Playing music

- On a mobile device, select **Browse** -> **Line-In** and choose the line-in device.
- On a Mac or PC, select **Line-In** from the **MUSIC** pane. Click ▼ next to the music source and choose **Play Now**.

Changing the settings

1. Choose one of the following:
 - On a mobile device, go to **More** -> **Settings** -> **Room Settings**. Choose the Sonos speaker the source is connected to and touch **Line-In**.
 - On a Mac or PC, go to **Manage** -> **Settings** (PC) or **Sonos** -> **Preferences** -> **Room Settings** (Mac). Choose the Sonos speaker the source is connected to from the **Room Settings for** drop-down and click the **Line-In** tab.
2. You can change the following settings:
 - **Line-In Source Name:** Choose a name from the list.
 - **Line-In Source Level:** A default (typical) line-in source level is automatically assigned for each source. If the volume sounds too low, you can choose a higher line level. (You may experience clipping at higher volume levels if you set the level too high.)
 - **Autoplay Room:** Choose the room you want this line-in source to play in whenever it's connected to Sonos.
 - **Include Grouped Rooms:** Turn on if you want the line-in source to play in rooms that are grouped with the autoplay room.
 - **Use Autoplay Volume:** Click the **Use Autoplay Volume** box if you want to use the external source to adjust the volume in the autoplay room. Use the slider to set a default volume.

Line-in encoding settings

When you have line-in music sources attached to a Sonos product, line-in encoding determines how Sonos will encode the data coming in from these sources. Your Sonos system defaults to *automatic* in order to provide the optimal playback experience. Sonos recommends you do not change this default. However, if you decide to make a change, we recommend the following usage guidelines:

Use **Uncompressed** if:

- You want optimal performance with home theaters.
- You want to produce the highest quality sound for your Sonos system (this selection requires more network bandwidth than compressed audio.)

Use **Compressed** if:

- You are connecting more than 4 rooms wirelessly.
- You are in an environment with heavy wireless interference and are experiencing dropouts.

To change the line-in encoding setting, select one of the following options:

- On a mobile device, go to **More** -> **Settings** -> **Advanced Settings** -> **Audio Compression**.
- On a PC, go to **Manage** -> **Settings** -> **Advanced**.
- On a Mac, go to **Sonos** -> **Preferences** -> **Advanced**.

Surround speakers

You can easily pair two speakers, such as two PLAY:5s, with a Sonos home theatre product to function as left and right surround channels in your Sonos surround sound experience.

If you have a CONNECT:AMP and speakers, you can configure the CONNECT:AMP for surround use. **Both the CONNECT:AMP and the PLAYBASE/PLAYBAR must be wired in this configuration**—this is a requirement only when configuring a CONNECT:AMP for surround. It is not a requirement for normal use of these products.

Set up CONNECT:AMP surround

Note: If this is a newly purchased CONNECT:AMP, be sure to add it to your Sonos system before attempting to set up surround speakers.

1. Connect the PLAYBASE/PLAYBAR to your router with an Ethernet cable.
2. Connect the CONNECT:AMP to your router, or to the PLABASE/PLAYBAR, with an Ethernet cable.
3. Attach desired speakers to the CONNECT:AMP (power rating should be at least 75W for 8 Ohm speakers and at least 150W for 4 Ohm speakers.)
4. Position the speaker connected to the **Left** terminal on the CONNECT:AMP as the left surround speaker in your surround sound setup.
5. Position the speaker connected to the **Right** terminal on the CONNECT:AMP as the right surround speaker in your surround sound setup.

Note: Make sure your PLAYBASE/PLAYBAR is not currently configured with any other surround speakers. It can be configured with a SUB.


6. Locate the IP address for your PLAYBASE/PLAYBAR.



- On a PC, go to **Help** -> **About My Sonos System**.
- On a Mac, go to **Sonos** -> **About My Sonos System**.
- On a mobile device, go to **More** -> **Settings** -> **About My Sonos System**.


7. Open a browser on your computer.

8. Type **http://playbarIP:1400/wiredsat.htm** (e.g. **http://10.20.11.49:1400/wiredsat.htm**) into the address bar and then follow the prompts to complete the CONNECT:AMP surround setup.

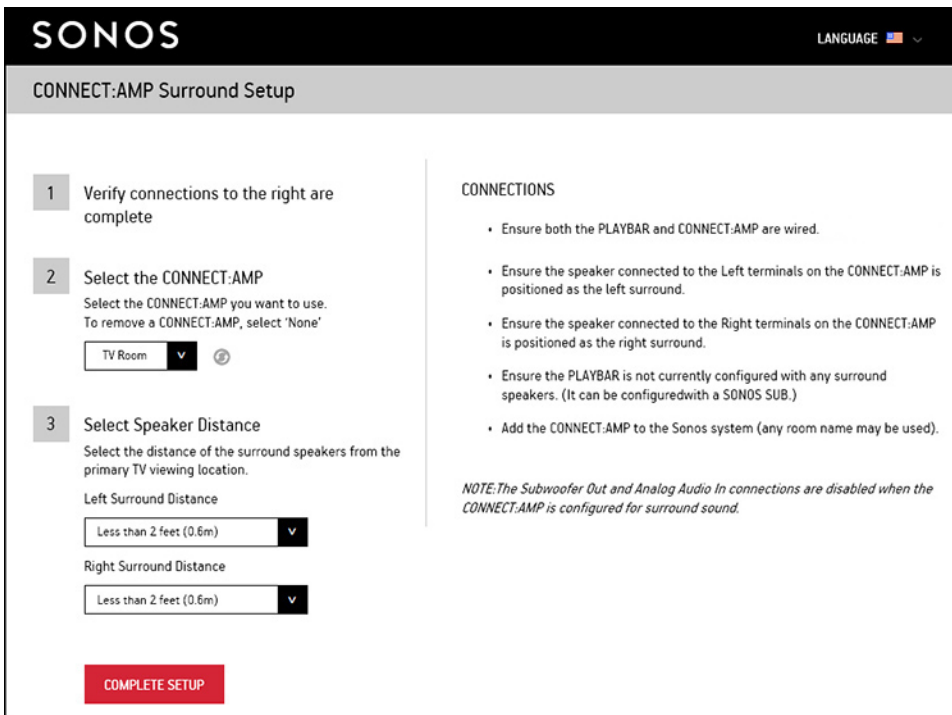

Remove CONNECT:AMP surround

1. Locate the IP address for your PLAYBASE/PLAYBAR.

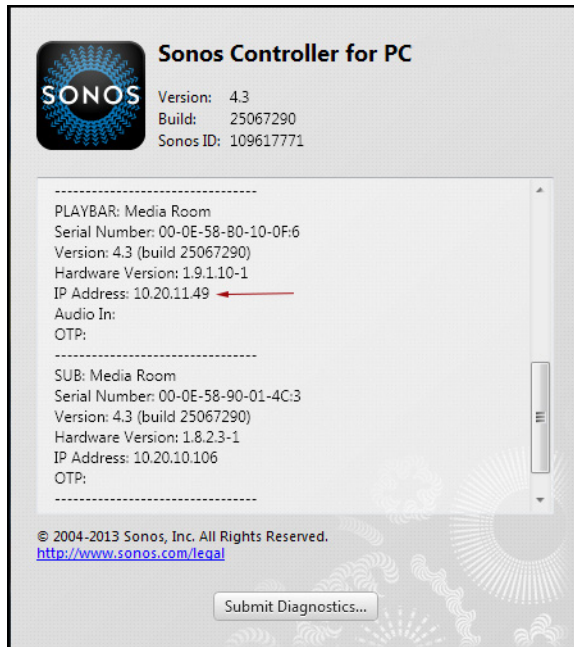

- On a PC, go to **Help -> About My Sonos System**.
- On a Mac, go to **Sonos -> About My Sonos System**.
- On a mobile device, go to **More -> Settings -> About My Sonos System**.

2. Open a browser on your computer.
3. Type **http://playbarIP:1400/wiredsat.htm** (e.g. **http://10.20.12.49:1400/wiredsat.htm**) into the address bar.
4. From the **CONNECT:AMP** drop-down, choose **None** and then click **Complete Setup**.
5. If desired, you can now disconnect the CONNECT:AMP from your router and move it to a new location.

Playing music

Make a selection by tapping **Browse** on your mobile device or by selecting a music source from the **MUSIC** pane on a Mac or PC.

Radio

Sonos includes a radio guide that provides immediate access to thousands of free Internet radio stations and broadcast programs. You can easily find radio from all over the world—music, news, and variety programming, including archived shows and podcasts.

To select a radio station, simply select **Browse -> Radio by TuneIn** and choose a station.

Music services

A music service is an online music store or online service that sells audio on a per-song, per audiobook, or subscription basis. Sonos is compatible with several music services - you can visit our website at **www.sonos.com/music** for the latest list. (Some music services may not be available in your country. Please check the individual music service's website for more information.)

If you are currently subscribed to a music service that's compatible with Sonos, simply add your music service user name and password information to Sonos as needed and you'll have instant access to the music service from your Sonos system.


1. To add a music service, tap **More** -> **Add Music Services**.
2. Select a music service.
3. Select **Add to Sonos**, and then follow the prompts. Your login and password will be verified with the music service. As soon as your credentials have been verified, you will be able to select the music service from **Browse** (on mobile devices) or the **MUSIC** pane (on a Mac or PC).

Local music library

Sonos can play music from any computer or network-attached storage (NAS) device on your home network where you have shared music folders (up to 65,000 songs). During the setup process, you are guided through the process of accessing your local music library (such as your iTunes library). Over time, you may wish to add or remove folders from this list.

Note: We recommend using the Sonos app for Mac or PC to add shared folders. For more information, please visit our website at <http://faq.sonos.com/manage>.

To make changes to your local library using a mobile device, go to **More** -> **Settings** and choose one of the following options:

- To add a music folder, select **Manage Music Library** -> **Music Library Setup** and:
 - Touch **•••** -> **Add New Share** (iOS).
 - Touch **Add New Share** (Android).
- To remove a music folder, select **Manage Music Library** -> **Music Library Setup** and:
 - Touch  next to the folder you wish to remove (iOS).
 - Touch the folder and select **Remove Share** (Android).

Sonos indexes your local music so you can view your music collection by categories (such as artists, albums, composers, genres, or songs.) If you add new music, simply update your music index to add this music to your Sonos music library.

- To update your music library, select **Manage Music Library** -> **Update Music Index Now**. If you'd like your music library to update automatically each day, select **Schedule Music Index Updates** and then select an update time.

Playing music from your mobile device

You can play music and podcasts stored on any mobile device that's on the same network as Sonos. Just tap **Browse** -> **On this [mobile device]**.

Google Play Music (Android devices)

You can play music to Sonos directly from the Google Play Music app on any Android device. This feature is available for both Standard and All Access Google Play Music customers.

To play music directly from the Google Play Music app to Sonos, you must have both the Google Play Music app and the Sonos app installed on your mobile device.

Simply open the Google Play Music app and connect to a Sonos room or room group to start the music.

Control Sonos from your Spotify app

You can always play Spotify from the Sonos app. Now you can control Sonos directly from your Spotify app too (Spotify premium subscribers only).

While you're listening to music in the Spotify app, select **DEVICES AVAILABLE** to connect to a Sonos room or room group.

To use this feature you need to have a Sonos account. If you don't have one, choose one of the following options:

- On a mobile device, go to **More -> Settings -> Advanced Settings** and choose **Control Sonos from Spotify**.
- On a PC, go to **Manage -> Settings** and choose **Advanced**. From the **Music Sources** tab, choose **Control Sonos from Spotify**.
- On a Mac, go to **Sonos -> Preferences** and select **Advanced**. From the **Music Sources** tab, choose **Control Sonos from Spotify**.

I have a new router

If you purchase a new router or change your ISP (Internet service provider), you will need to restart all your Sonos products after the router is installed.

Note: If the ISP technician connects a Sonos product to the new router, you only need to restart your wireless Sonos products.

1. Disconnect the power cord from all of your Sonos products for at least 5 seconds.
2. Reconnect them one at a time, starting with the Sonos product that is connected to your router (if one is usually connected).

Wait for your Sonos products to restart. The status indicator light will change to solid white on each product when the restart is complete.

If your Sonos setup is completely wireless (you don't keep a Sonos product connected to your router), you will also need to change your wireless network password. Follow the steps below:

1. Temporarily connect one of your Sonos players to the new router with an Ethernet cable.
2. Go to **More -> Settings -> Advanced Settings -> Wireless Setup**.
Sonos will detect your network.
3. Enter the password for your wireless network.
4. Once the password is accepted, unplug the player from your router and move it back to its original location.

I want to change my wireless network password

If your Sonos system is set up wirelessly and you change your wireless network password, you will also need to change it on your Sonos system.

1. Temporarily connect one of your Sonos players to your router with an Ethernet cable.
2. Choose one of the following options:
 - Using the Sonos app on a mobile device, go to **More -> Settings -> Advanced Settings -> Wireless Setup**.

- Using the Sonos app on a PC, go to **Settings** -> **Advanced** from the **Manage** menu. On the **General** tab, select **Wireless Setup**.
 - Using the Sonos app on a Mac, go to **Preferences** -> **Advanced** from the **Sonos** menu. On the **General** tab, select **Wireless Setup**.
3. Enter the new wireless network password when prompted.
 4. Once the password is accepted, you can unplug the player from your router and move it back to its original location.

Status indicators

Indicator Lights	Status	Sonos Product	Additional Information
Flashing white	Powering up	BRIDGE, BOOST, CONNECT, SUB, CONNECT:AMP, DOCK, PLAY:1, PLAY:3, PLAY:5, PLAYBAR, PLAYBASE	
Solid white (<i>dimly lit</i>)	Powered up and associated with a Sonos system (normal operation)	BRIDGE, BOOST, CONNECT, SUB, CONNECT:AMP, DOCK, PLAY:1, PLAY:3, PLAY:5, PLAYBAR, PLAYBASE	You can turn the white status indicator light on or off from More -> Settings -> Room Settings . (Sonos products that are paired together share the same setting.)
Solid white (<i>brightly lit</i>)	Touch control(s) active	PLAY:5 (gen2), PLAYBASE	Brightens when touch controls are activated.
Flashing green	Powered up, not yet associated with a Sonos system Or, WAC (wireless access configuration) join ready	BRIDGE, BOOST, CONNECT, SUB, CONNECT:AMP, DOCK, PLAY:1, PLAY:3, PLAY:5, PLAYBAR, PLAYBASE	For a SUB, this may indicate the SUB is not yet paired with a speaker.
Slowly flashing green	Surround audio is off or SUB audio is off	PLAY:1, PLAY:3, PLAY:5 (gen2), SUB	Applicable for speaker configured as a surround speaker, or for a SUB paired with a PLAYBAR.
Solid green	Volume set to zero or muted	CONNECT, CONNECT:AMP, PLAY:1, PLAY:3, PLAY:5, PLAYBAR, PLAYBASE	

Indicator Lights	Status	Sonos Product	Additional Information
Flashing orange	During SonosNet setup, this occurs after a button press while the product is searching for a household to join.	BRIDGE, BOOST, CONNECT, SUB, CONNECT:AMP, DOCK, PLAY:1, PLAY:3, PLAY:5, PLAYBAR, PLAYBASE	
Rapidly flashing orange	Playback / Next Song failed	CONNECT, CONNECT:AMP, PLAY:1, PLAY:3, PLAY:5, PLAYBAR, PLAYBASE	Indicates either playback or next song was not possible.
Solid orange	During wireless setup, this occurs while the Sonos open access point is temporarily active. If you are not setting up Sonos, this may indicate warning mode.	CONNECT, SUB, CONNECT:AMP, PLAY:1, PLAY:3, PLAY:5, PLAYBAR, PLAYBASE	If the orange light is on AND the speaker's volume level automatically reduces, this indicates the speaker is in warning mode. <ul style="list-style-type: none"> • Press the Pause button to stop the audio. • For Sonos products with a vent opening (SUB, CONNECT:AMP), check to make sure it's not blocked. • Check the room temperature to make sure it's less than 104°F/ 40° C. • If the speaker is in direct sunlight, provide shade. • Allow the speaker to cool for several minutes and then press Play to restart the audio. • If the problem does not resolve, please contact Customer Care.
Flashing green and white	Speakers are being linked to your Sonos account.	BRIDGE, BOOST, CONNECT, SUB, CONNECT:AMP, DOCK, PLAY:1, PLAY:3, PLAY:5, PLAYBAR, PLAYBASE	Link the speaker(s) to your account. For more information, see http://faq.sonos.com/accountlink .

Indicator Lights	Status	Sonos Product	Additional Information
Flashing red and white	Speaker repartitioning failed.	BRIDGE, BOOST, CONNECT, SUB, CONNECT:AMP, DOCK, PLAY:1, PLAY:3, PLAY:5, PLAYBAR, PLAYBASE	Please contact Customer Care.
Flashing red	Speaker setup timed out. This happens if a speaker is plugged in for 30 minutes without being set up.	CONNECT, SUB, CONNECT:AMP, PLAY:1, PLAY:3, PLAY5, PLAYBAR, PLAYBASE	Unplug the speaker, wait 10 seconds, plug it back in, and set it up.

Important safety information

Please read these instructions and heed all warnings. Keep them in a convenient location and make sure everyone in the household is aware of them.

Warning: Do not open Sonos products as there is a risk of electric shock. Under no circumstances should Sonos products be repaired by anyone other than an authorized Sonos repair center, as this will invalidate the warranty. Please contact Sonos Customer Support for more information.

Location

- The product should not be used near water—avoid close proximity to a bathtub, kitchen sink, laundry tub, wet basement, swimming pool, etc.
- Do not place the unit where it will be exposed to excessive heat (e.g., radiators, heat registers, stoves), direct sunlight, or a dusty environment (e.g., woodworking shop.)
- Do not place the unit where it will be exposed to flammable liquids and/or fumes.
- Do not place the unit in a small confined space (e.g., closet or cabinet, under a bed or sofa) where ventilation is restricted.
- Protect the power cable from being walked on or pinched, particularly at plugs, convenience receptacles, and the point where it exits the product. The mains cord should be readily available to disconnect the power.

Proper Ventilation

- Leave 10” of open space around the sides and above the unit to ensure proper ventilation.
- Ventilation should not be impeded by covering the ventilation openings with items such as tablecloths, curtains, or papers.
- Do not let foreign objects into the unit. If a foreign object should get into the unit, unplug the unit and contact Sonos for servicing guidance.

Usage

- Do not operate or handle the product with wet hands.
- Do not place any object on top of the product (e.g. vase, coffee cup, potted plant, books, magazines, etc.)
- Only use attachment/accessories specified by Sonos.
- Unplug the power cord during lightning storms or when unused for long periods of time.
- Never disassemble or modify the product in any way.

Cleaning & Maintenance

- Keep the unit free from dust, pet hair and other fine particles.
- Wipe only with a soft, dry cloth.
- Do not use chemical solvents (e.g. alcohol, benzene, paint thinner) or other flammable cleaning liquids to clean the product.
- Refer all servicing to Sonos qualified service personnel. Servicing is required when the unit or the power cord has been damaged in any way, if liquid or other foreign matter has fallen into the ventilation openings, or the unit has been exposed to rain or moisture.

Warning: To reduce the risk of fire or electric shock, do not expose this apparatus to rain or moisture.

Specifications

Feature	Description
Audio	
Amplifier	Class-D
Rated Output	110W RMS (2x55W continuous average power into 8 ohms, THD+N<0.02%)*
Speaker Connections	Spring binding posts (in North America, the ZP120 has combined spring binding post/banana jack connectors)
Line-In Connections	Auto-detecting RCA type
Subwoofer Output	Auto-detecting RCA type, 80 Hz crossover

Feature	Description
Music Access	
Audio Formats Supported	<p>Support for compressed MP3, AAC (without DRM), WMA without DRM (including purchased Windows Media downloads), AAC (MPEG4), AAC+, Ogg Vorbis, Apple Lossless, Flac (lossless) music files, as well as uncompressed WAV and AIFF files.</p> <p>Native support for 44.1kHz sample rates. Additional support for 48kHz, 32kHz, 24kHz, 22kHz, 16kHz, 11kHz, and 8kHz sample rates. MP3 supports all rates except 11kHz and 8kHz.</p> <p>Note: Apple “Fairplay”, WMA DRM and WMA Lossless formats not currently supported. Previously purchased Apple “Fairplay” DRM-protected songs may be upgraded.</p>
Music Services Supported	<p>Sonos works seamlessly with most music services, including Apple Music™, Deezer, Google Play Music, Pandora, Spotify and Radio by Tuneln, as well as downloads from any service offering DRM-free tracks. Service availability varies by region. For a complete list, see http://www.sonos.com/music.</p>
Internet Radio Supported	Streaming MP3, HLS/AAC, WMA
Album Art Supported	JPEG, PNG, BMP, GIF
Playlists Supported	Napster, iTunes, WinAmp, and Windows Media Player (.m3u, .pls, .wpl)
Networking	
Wireless Connectivity	<p>Connects to your home Wi-Fi network with any 802.11 b/g/n router. 802.11n only network configurations are not supported—you can either change the router settings to 802.11 b/g/n or connect a Sonos product to your router.</p>
SonosNet™ Extender	<p>Functions to extend and enhance the power of SonosNet, a secure AES encrypted, peer-to-peer wireless mesh network dedicated exclusively for Sonos to reduce Wi-Fi interference.</p>
Network Bridging	<p>2-port switch allows a connection to your network or to other Sonos speakers.</p>
Internet connectivity	<p>Internet connection required for access to Internet radio stations, online music services and software updates. (DSL, cable modem or LAN-based high-speed Internet connection required.) Internet functionality may require payment of separate fee to a service provider; local and/or long distance telephone charges may apply.</p>
General	
Power Supply	100 – 120V~ / 220 – 240V~ 50 – 60 Hz, user-switchable
Front Panel Buttons	Volume and Play/Pause
Front Panel LED Indicators	Audio and player status indicators
Dimensions (H x W x D)	3.50 x 7.28 x 8.15 in. (89 x 185 x 207 mm)

Feature	Description
Weight	5.1 lbs. (2.3 kg)
Operating Temperature	32° to 104° F (0° to 40° C)
Storage Temperature	4° to 158° F (-20° to 70° C)
Product Finish	Anodized precision machined extrusion aluminum case. Aluminum casing also facilitates passive cooling.

* Both channels driven, 22Hz-20KHZ-AES17 measurement bandwidth.

* Specifications subject to change without notice.

Product guide feedback?

We'd love to hear from you! We'll read your feedback carefully and use it to help us improve our product guides. Write to us at: docfeedback@sonos.com

If you're having a problem with your Sonos system, please contact Customer Care so they can help. Email them at <http://www.sonos.com/emailsupport>.

Need more help?

- Tap **More** -> **Help & Tips** for simple tips for getting the most out of your speakers.
- Visit our Frequently Asked Questions (FAQ) pages at www.sonos.com/support.
- Ask us a question at <http://www.sonos.com/emailsupport>.